

110cc

- People should not operate an ATV beyond 0 4d ()Tj 7.21391 4

3.0 TEACHING TECHNIQUES

Your student's safety depends on your commitm

STEP 4: ADJUST THE SPEED LIMITER TO SLOW

Next, start the ATV's engine and have the student practice starting off, rid

STARTING THE ATV FOR THE FIRST TIME

Add a small amount (half liter or so) of petrol in the gas tank, and check for any fuel leaks. Don't try to start the engine if you should see any fuel leaking.

Add fuel to a proper level. Switch the ignition key to the "on" position, and flick the kill switch away from you. Hold the brake lever, the two rear lights will light up. Now press the start button to start the engine. Refer to picture 1.



The choke is located on the right side of the ATV if you are sitting on it. It is under the plastic cover (e)Tj 6.01159 0 Td (v)Tj 6.01159 0 Td (e)Tj 6.01159 0


ADJUST AIR/FUEL MIX SCREW

The mix screw has been properly adjusted at factory, and normally it does not need further adjustment. However, if you are operat

THROTTLE CABLE ADJUSTMENT

The adjustment is to ensure that the throttle cable is pulling full
throttle and to set free play in the thumb throttle lever 6.0hp 5900 Title Tjncp01159 ANT

BRAKE ADJUSTME

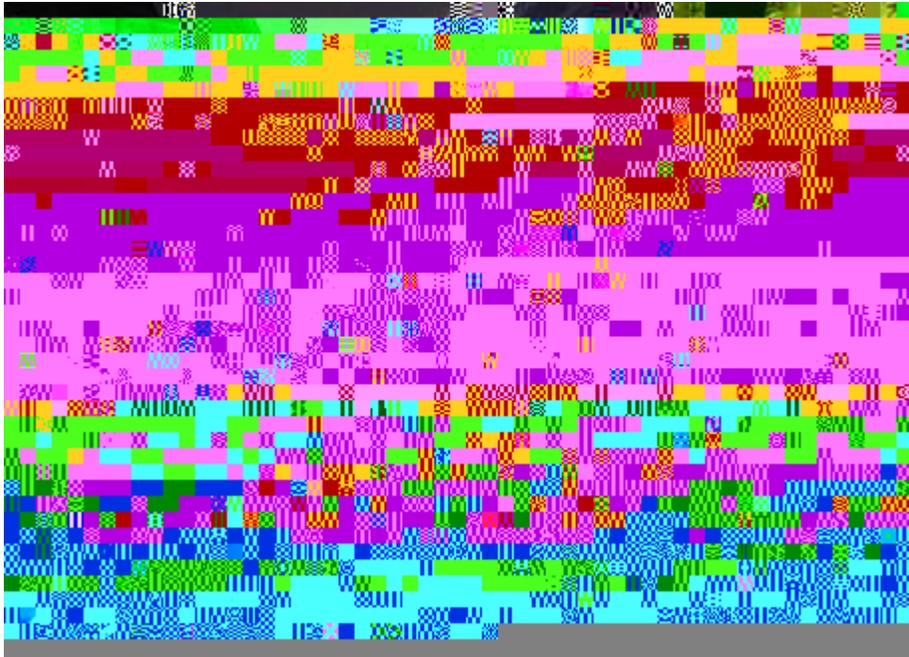

FUEL AND OIL

Petrol: unleaded petrol,

Engine oil: your new ATV already has oil added, but we recommend that you drain the oil

seconds, i.e. the ATV is armed within 3 seconds. When the ATV is armed and the ATV is being pushed, the beeper will sound "Bee" 4 times; the beeper will sound continuously if the ATV is being pushed again within 5 seconds.

- 2) When the alarm system is active and the "Bee"

6.0 WIRING DIAGRAM

